


Installation and Maintenance Instructions

Apinox Product Code 356 and 358 Circular Wash Trough


Model 356 / 358 installation (measurements 356 / 358)

Floor anchoring points (A):

Electric supply for sensor operated units only (B)

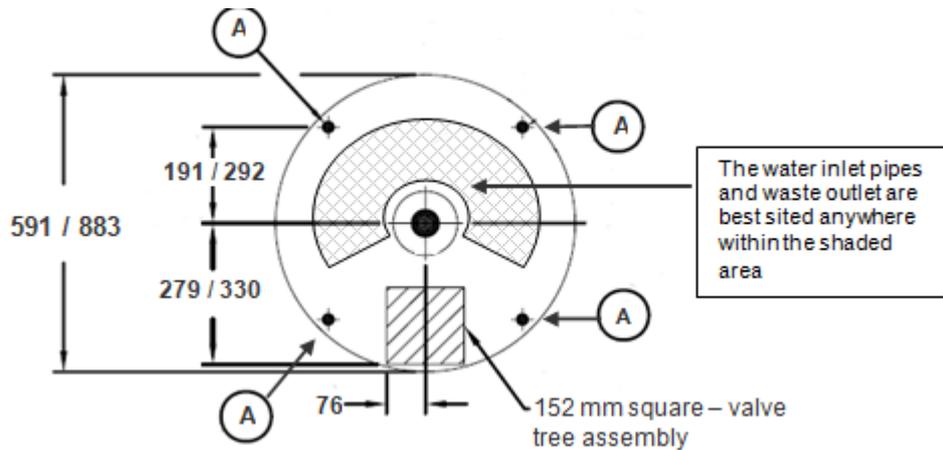

- 1) Remove pedestal skirt quarter panel (D)
- 2) Make up installer provided waste
- 3) Install floor anchors (A) and attach fixture to the floor
(anchors and anchor hardware to be supplied by installer)

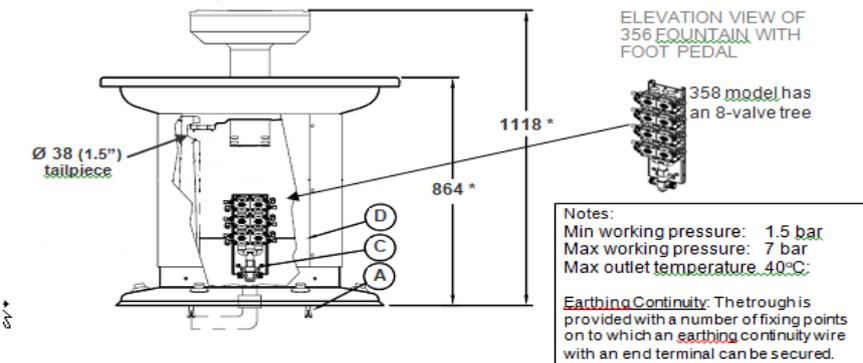

- 4) Ø22 mm inlet stub to valve tree (C).
Flush supply lines before making up connections
- 5) Adjust TMV3 mixing valve to desired temperature if factory setting is not suitable
- 6) Set timing cycle on metering valves
- 7) Reinstall pedestal skirt quarter panel

* measurements reduced by 100 mm for junior height versions (764 / 1018 mm)

Please see our [Care and Maintenance](#) information sheet for routine care and cleaning

Caution: turn off supply and drain if subjected to freezing temperatures