



DFBF471-WRAS Fitting Instructions

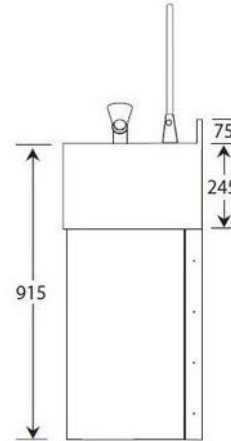

The DFBF471-WRAS is supplied in two parts:

- Top drinking fountain
 - Bottom shroud and frame
1. Remove and discard the bottom access panel fixed to the top drinking fountain. Keep the fixings.
 2. Attach the top drinking fountain to the bottom frame and shroud using the same fixing points and fixings – access via the back.
 3. Remove the side fixing screws and remove the shroud of the lower part to gain access to the wall fixing points.

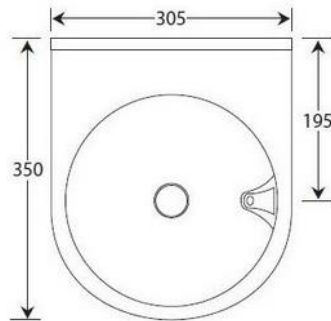

4. Fit the waste fitting to the drinking fountain.
5. Fit the bubbler tap and bottle filling tap to the drinking fountain.

Images below of thread on bottle filler and bubbler.



6. A cut out is required in the wall to accommodate the waste pipework and inlet pipework.
7. The top joggle strip can be fixed to the back wall to hold the top of the drinking fountain to the wall.
8. Fix the unit to the back wall (fixings will need to be purchased to suit your wall type).
9. The waste fitting and taps (2) can be hard plumbed to your buildings water pipework or attached using flexible connections.
10. Check all plumbing connections are watertight, then re-attach the shroud to the frame.
11. The flow of bottle filler and bubbler can be adjusted via allen key screw below the nozzle shown below.



12. Clean the unit with warm soapy water and a cloth or stiff bristle brush. Further cleaning should be regularly undertaken with soapy water only. Chemical cleaners are not required or advised.